



MR10

SERVICE MANUAL

■ TOP COVER

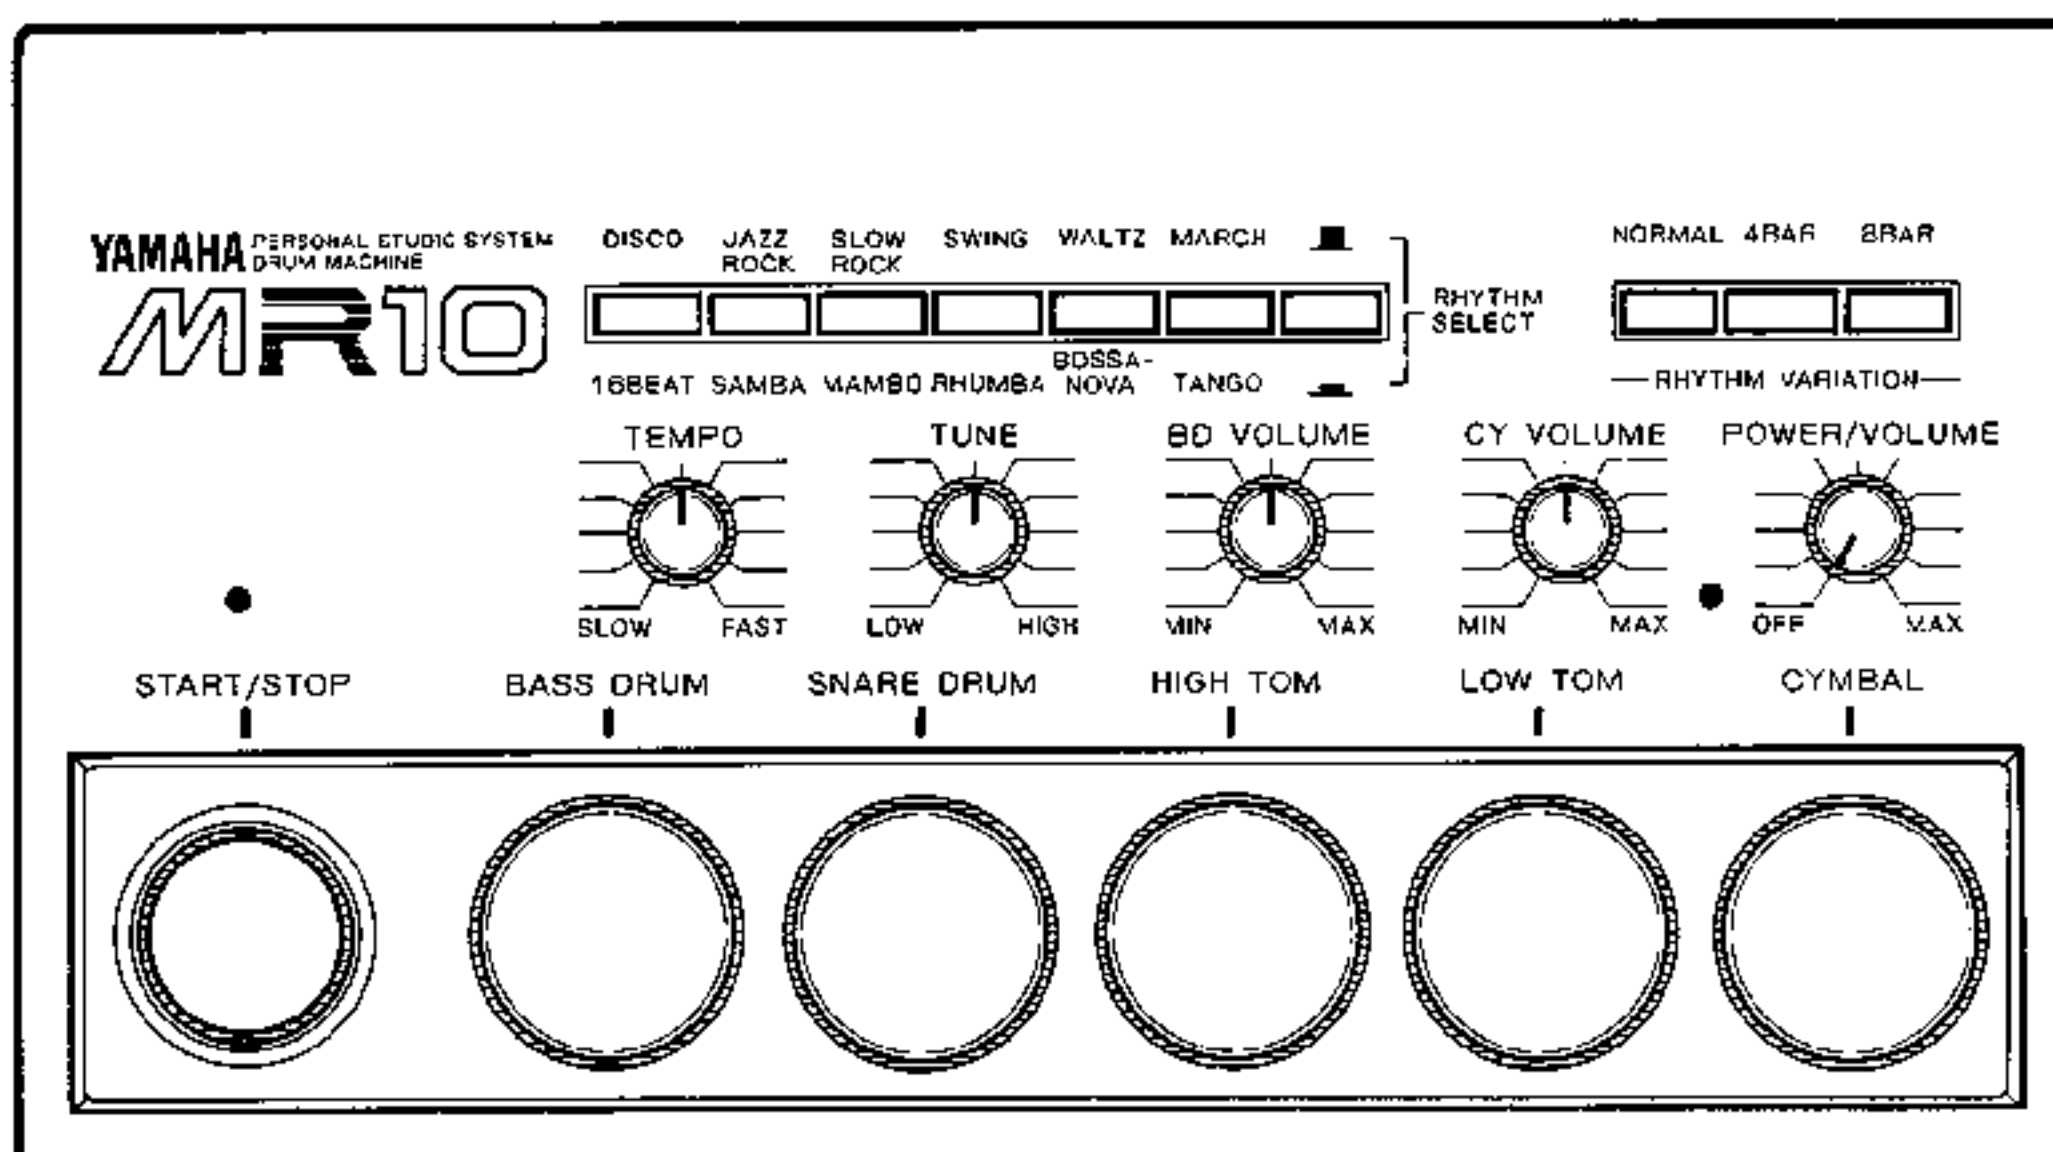

■ SIDE PANEL

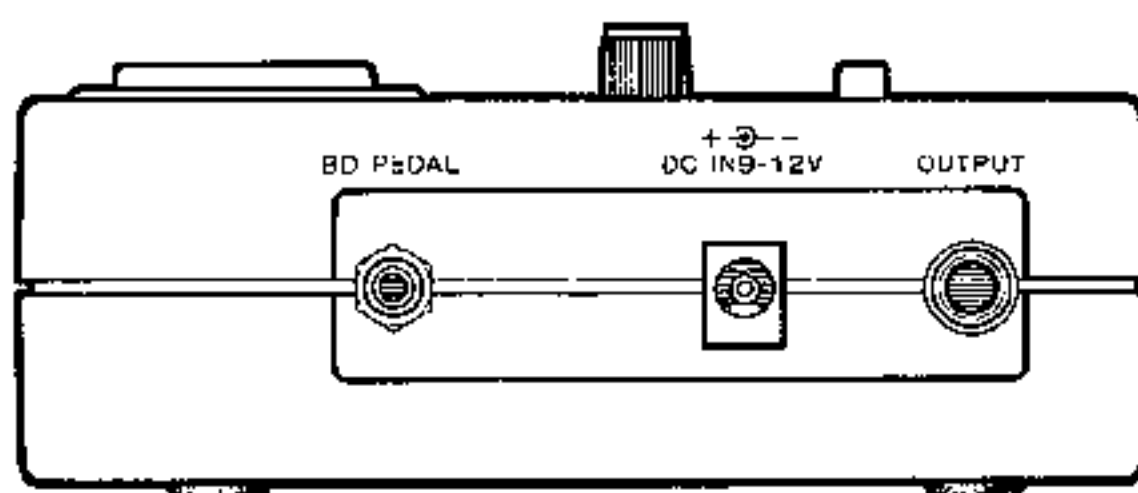


■ CONTENTS


| | |
|---------------------------------|---|
| SPECIFICATIONS | 1 |
| CAUTION IN DISASSEMBLYING | 1 |
| RHYTHM PATTERN | 1 |

| | |
|--|---|
| BLOCK DIAGRAM | 3 |
| PRINTED CIRCUIT BOARD (Parts side) | 3 |
| SCHEMATIC DIAGRAM | 4 |


SCHEMATIC DIAGRAM

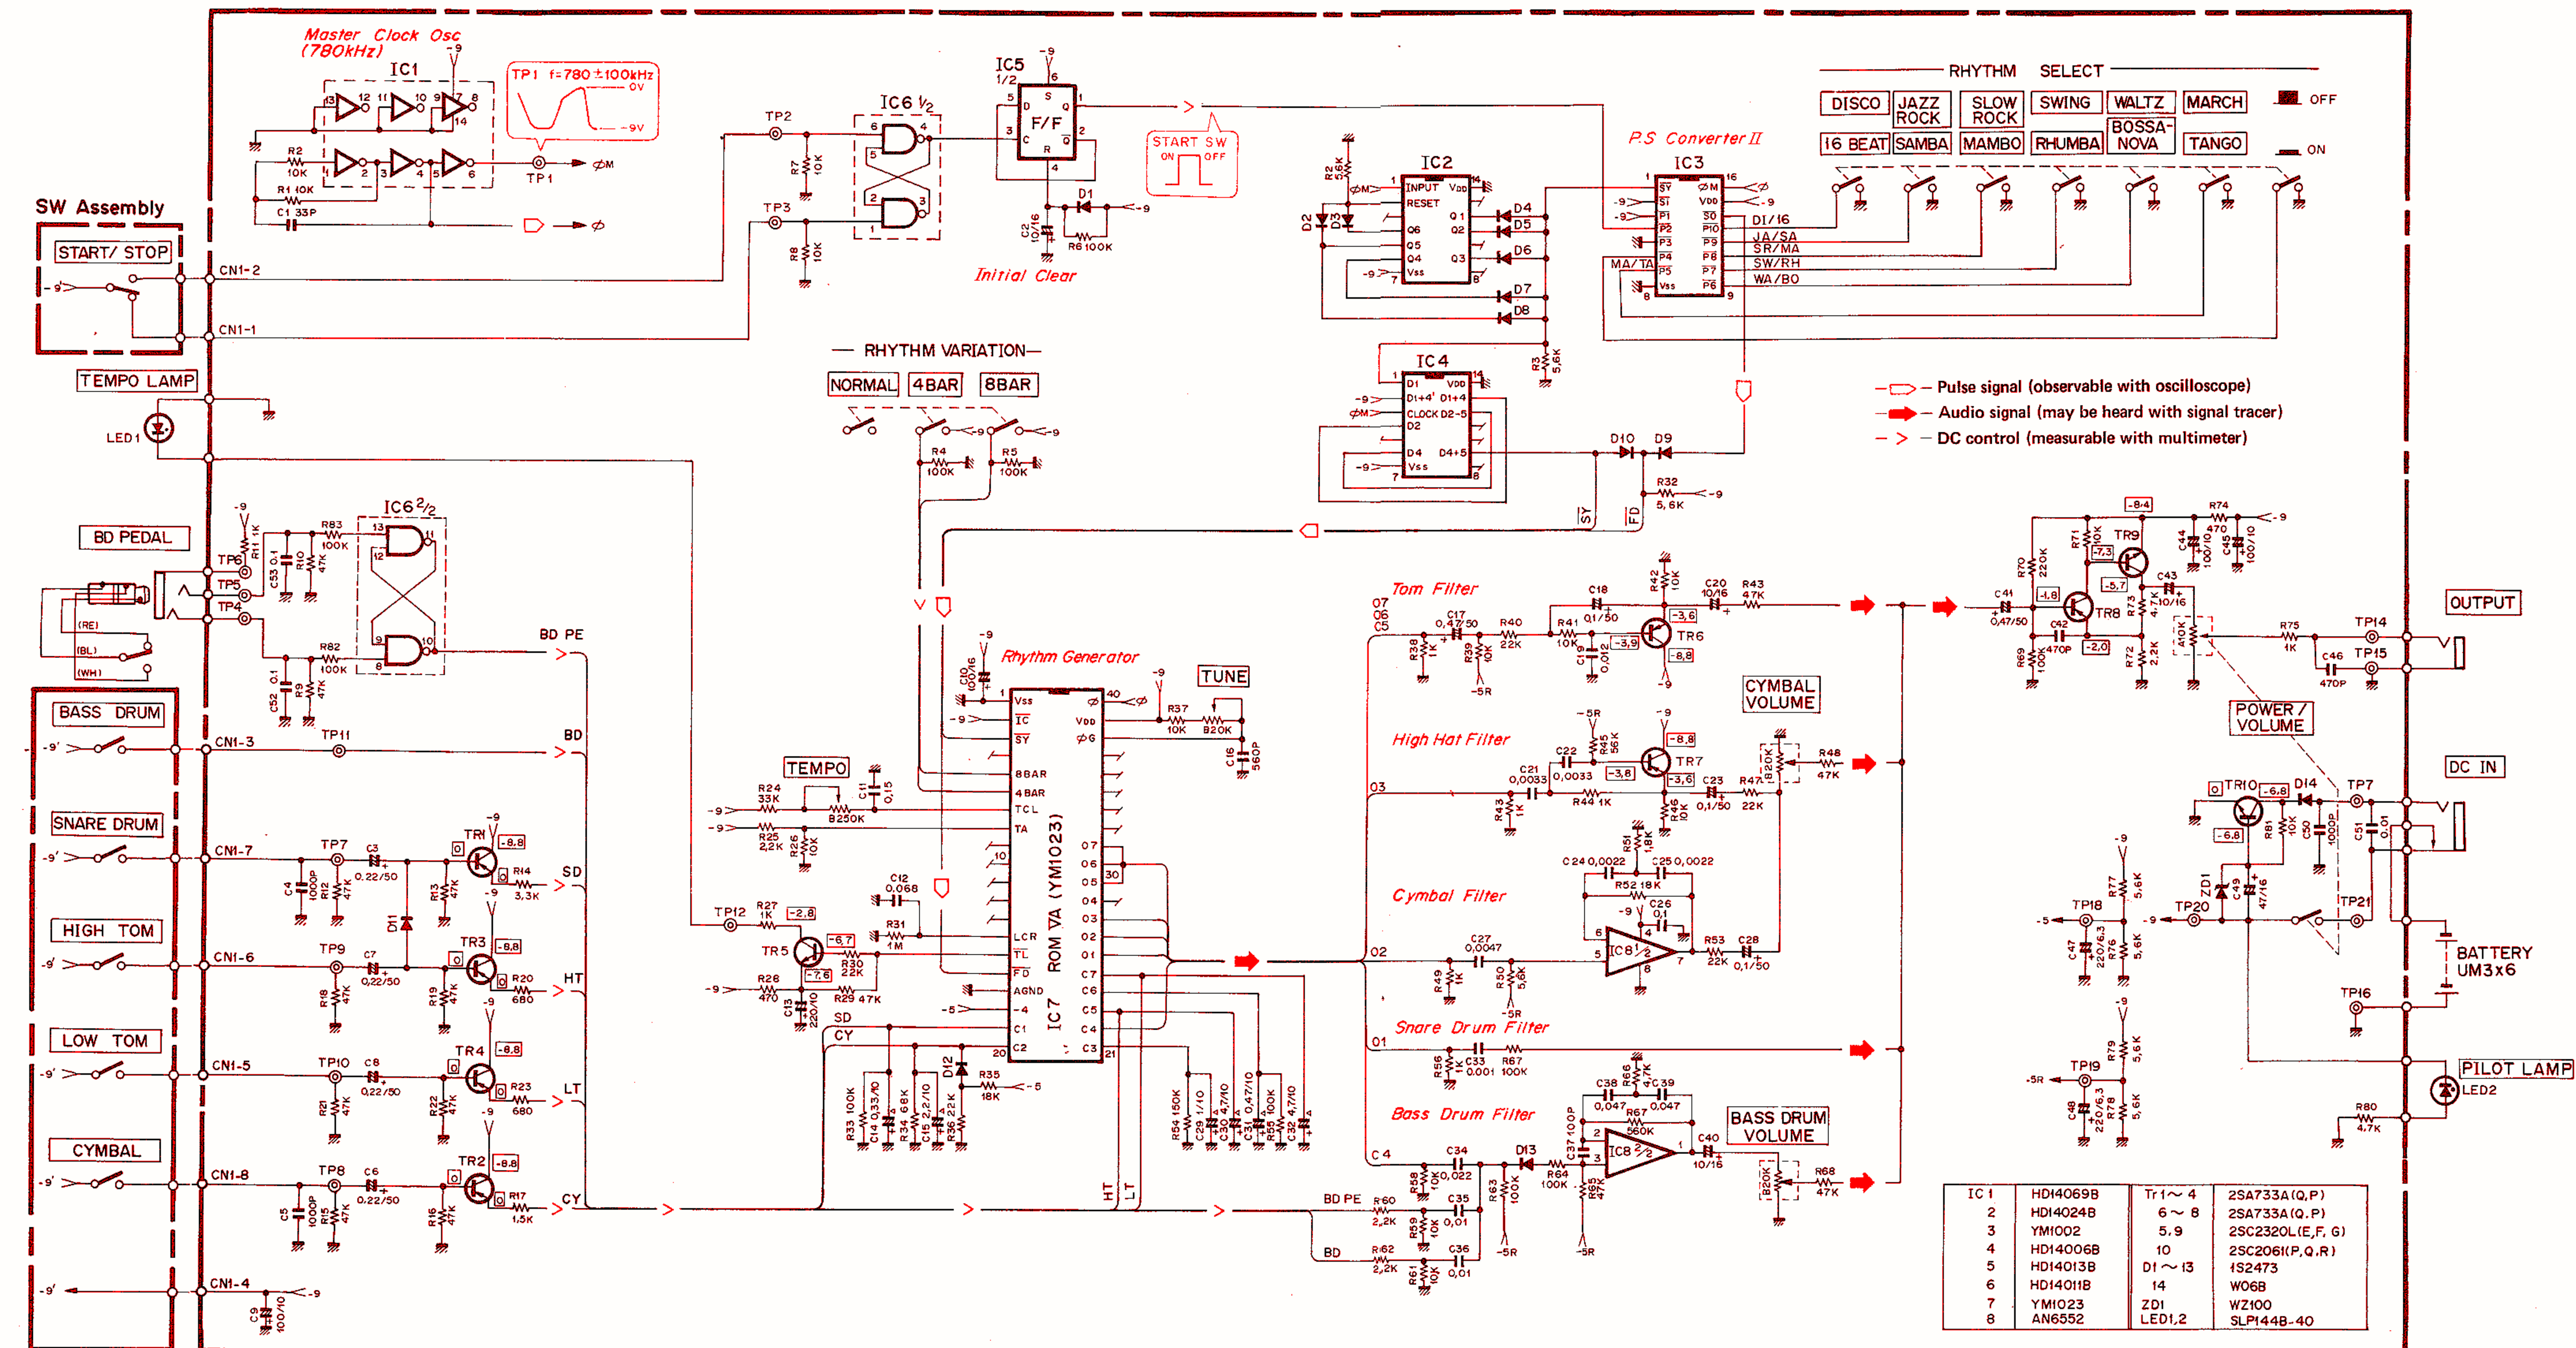




SW Assembly

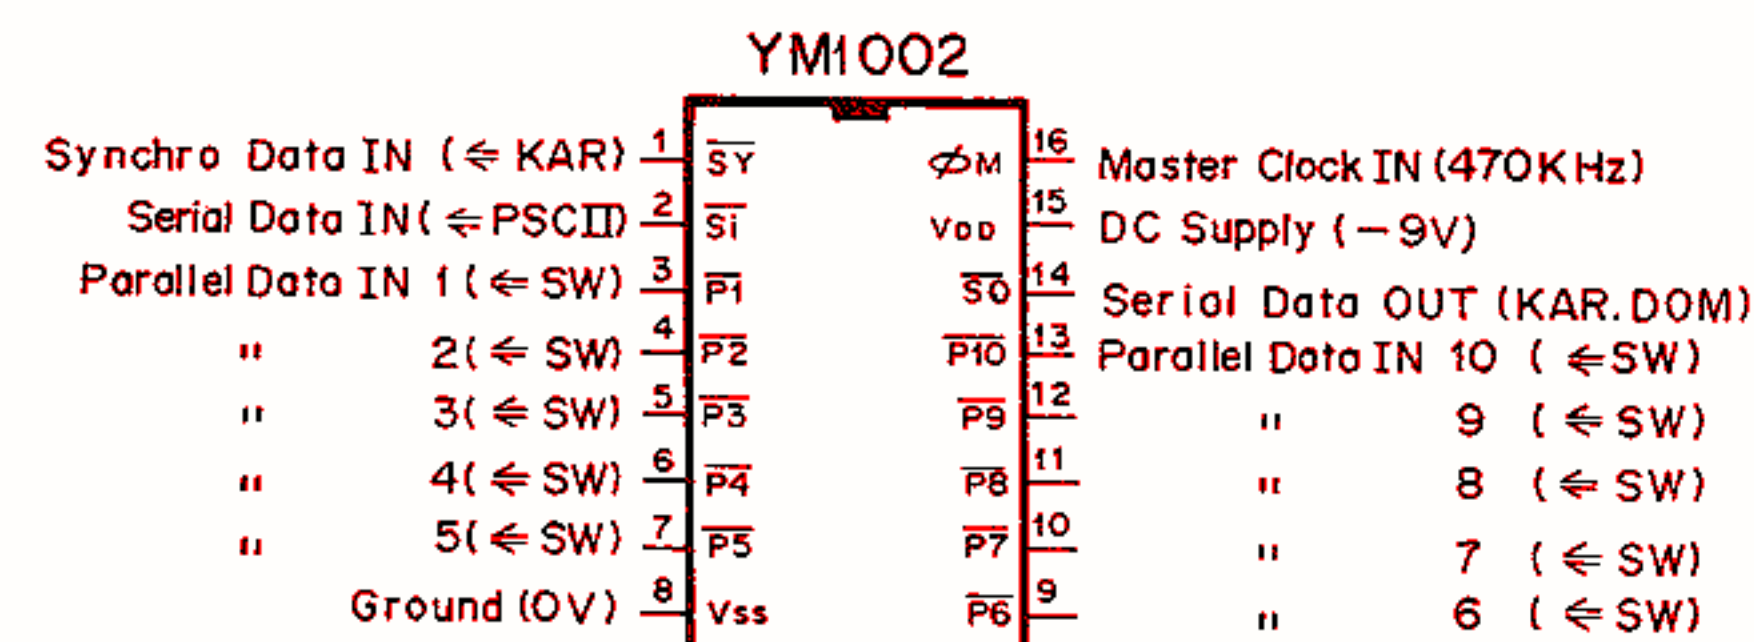

Parallel - Serial Converter II

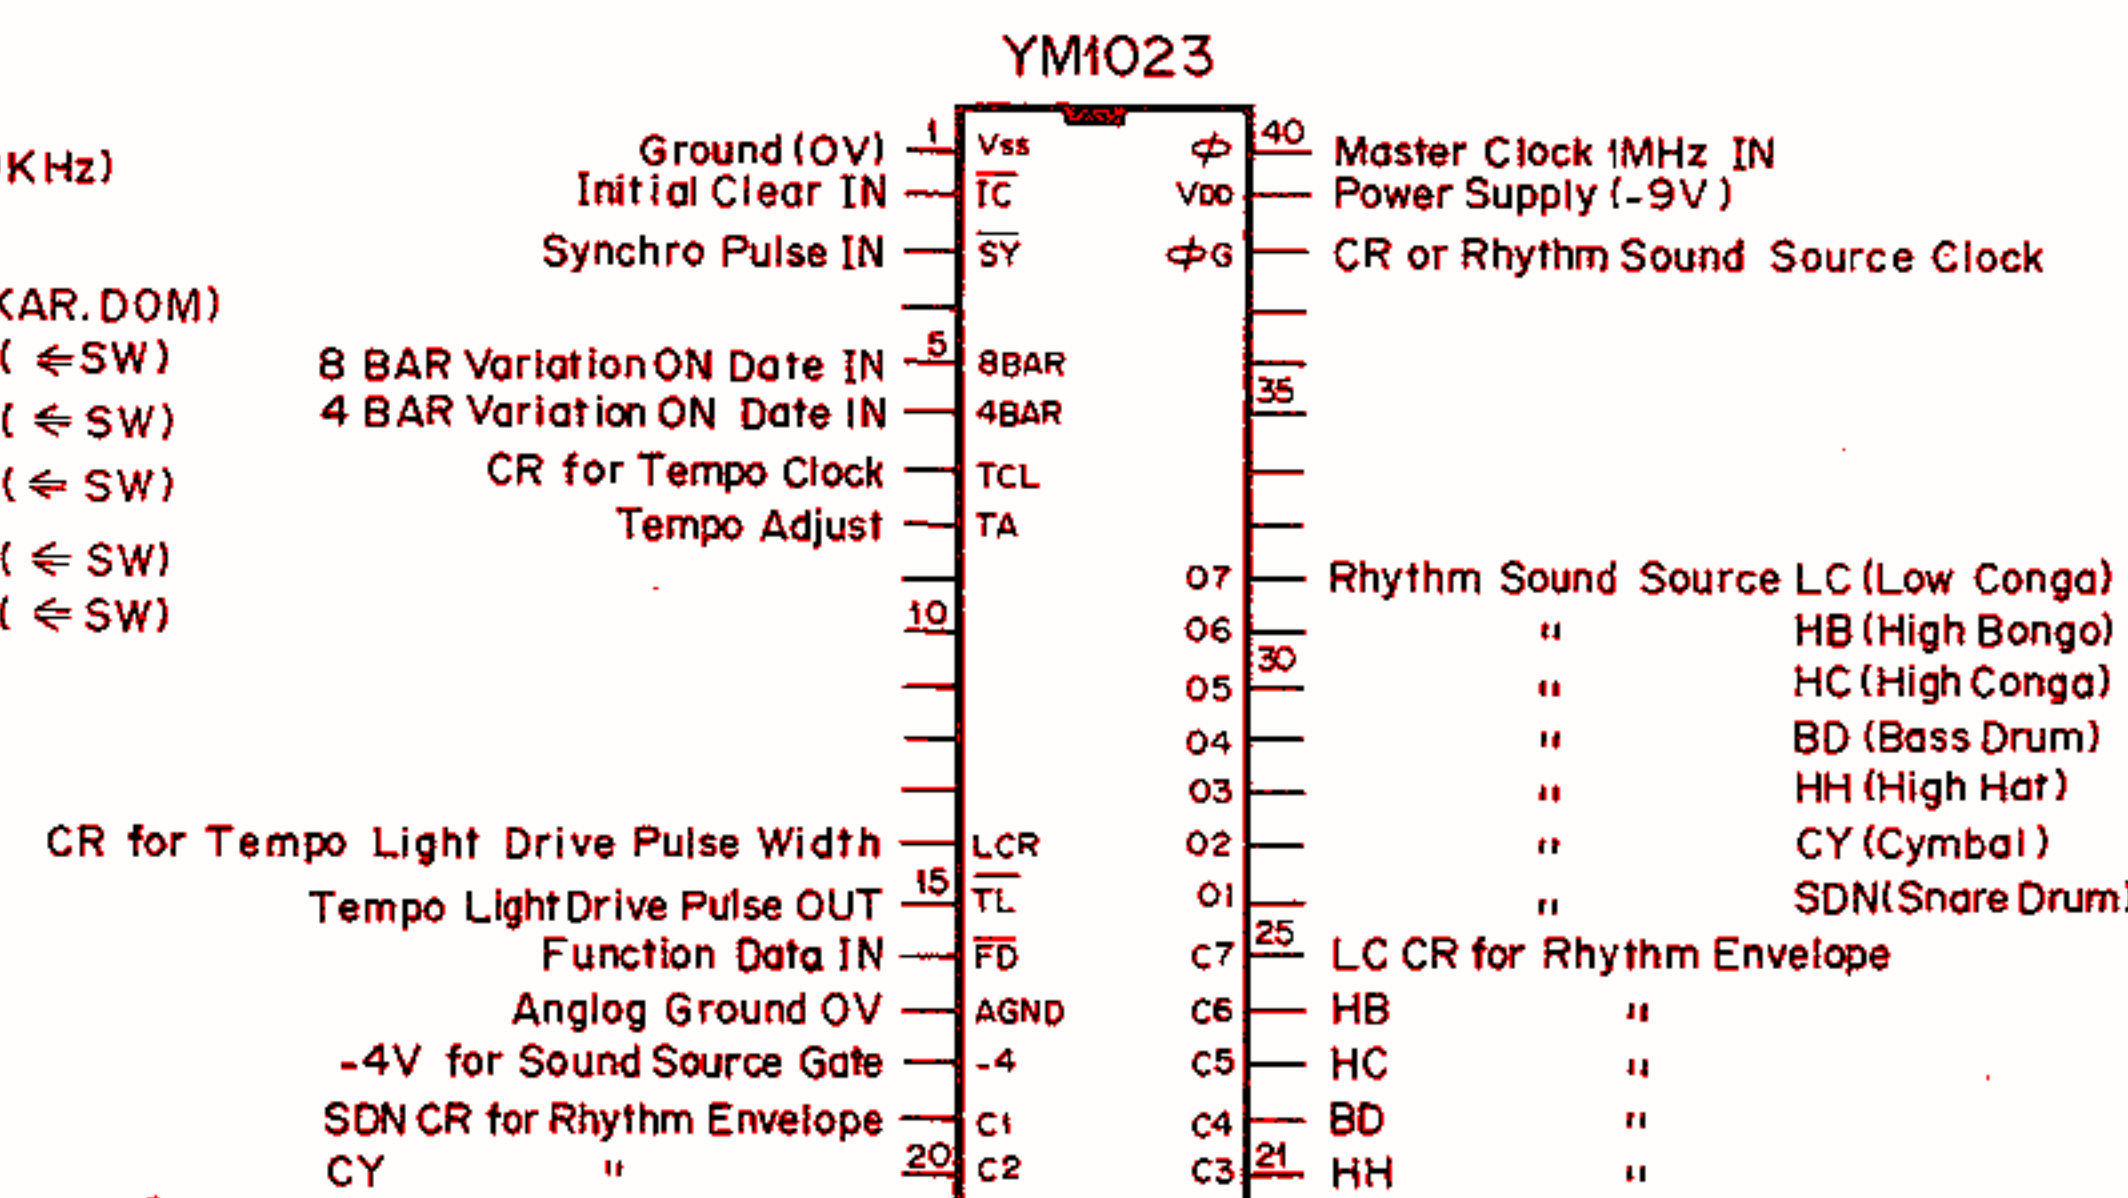


Read Only Memory VA (ROM VA)

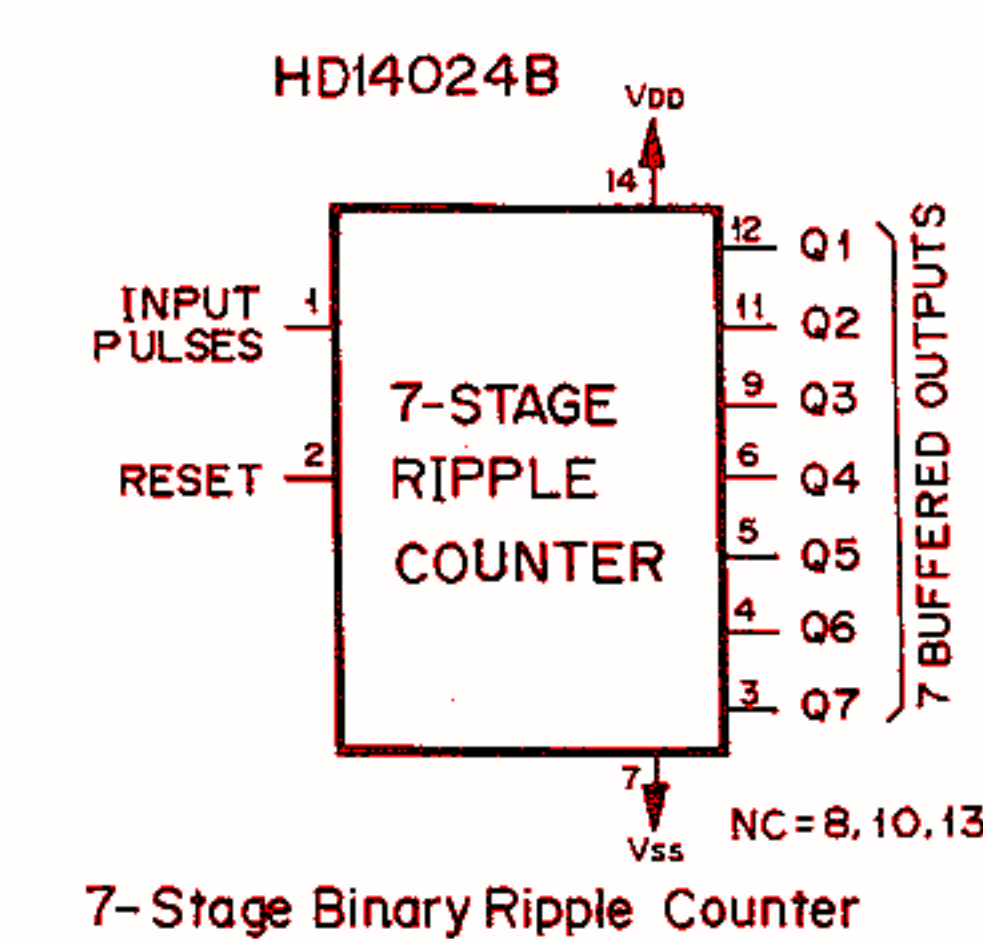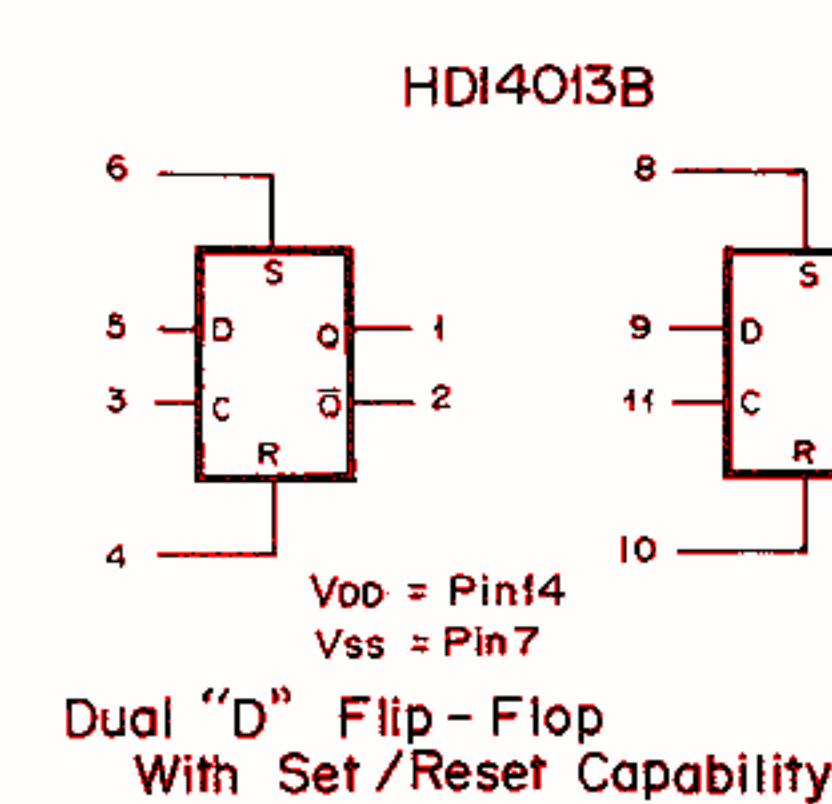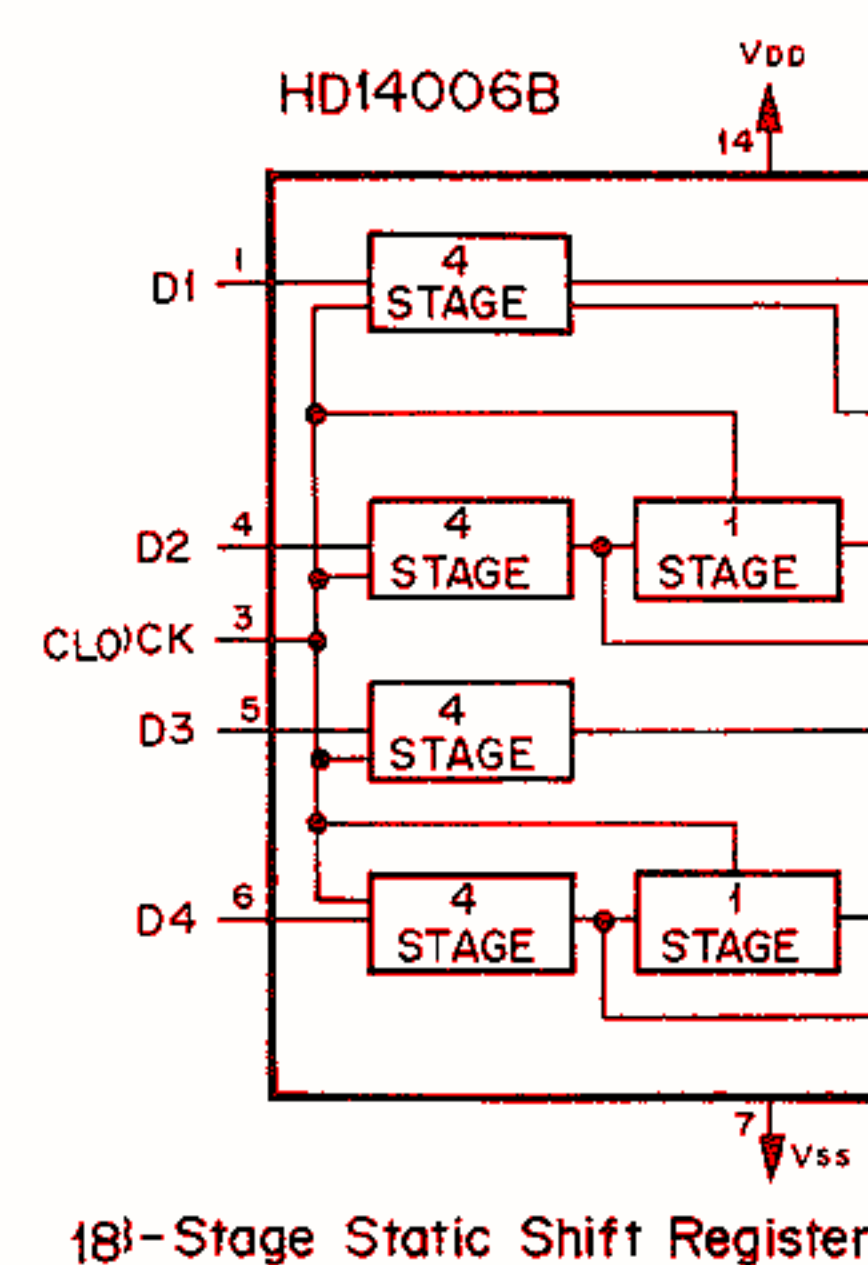


* All voltages measured with a 10MΩ/V DC electric meter, under no-signal condition.
* This schematic diagram is subject to change without notice.

Yamaha MR 10
Scanned by Loscha

BLOCK DIAGRAM

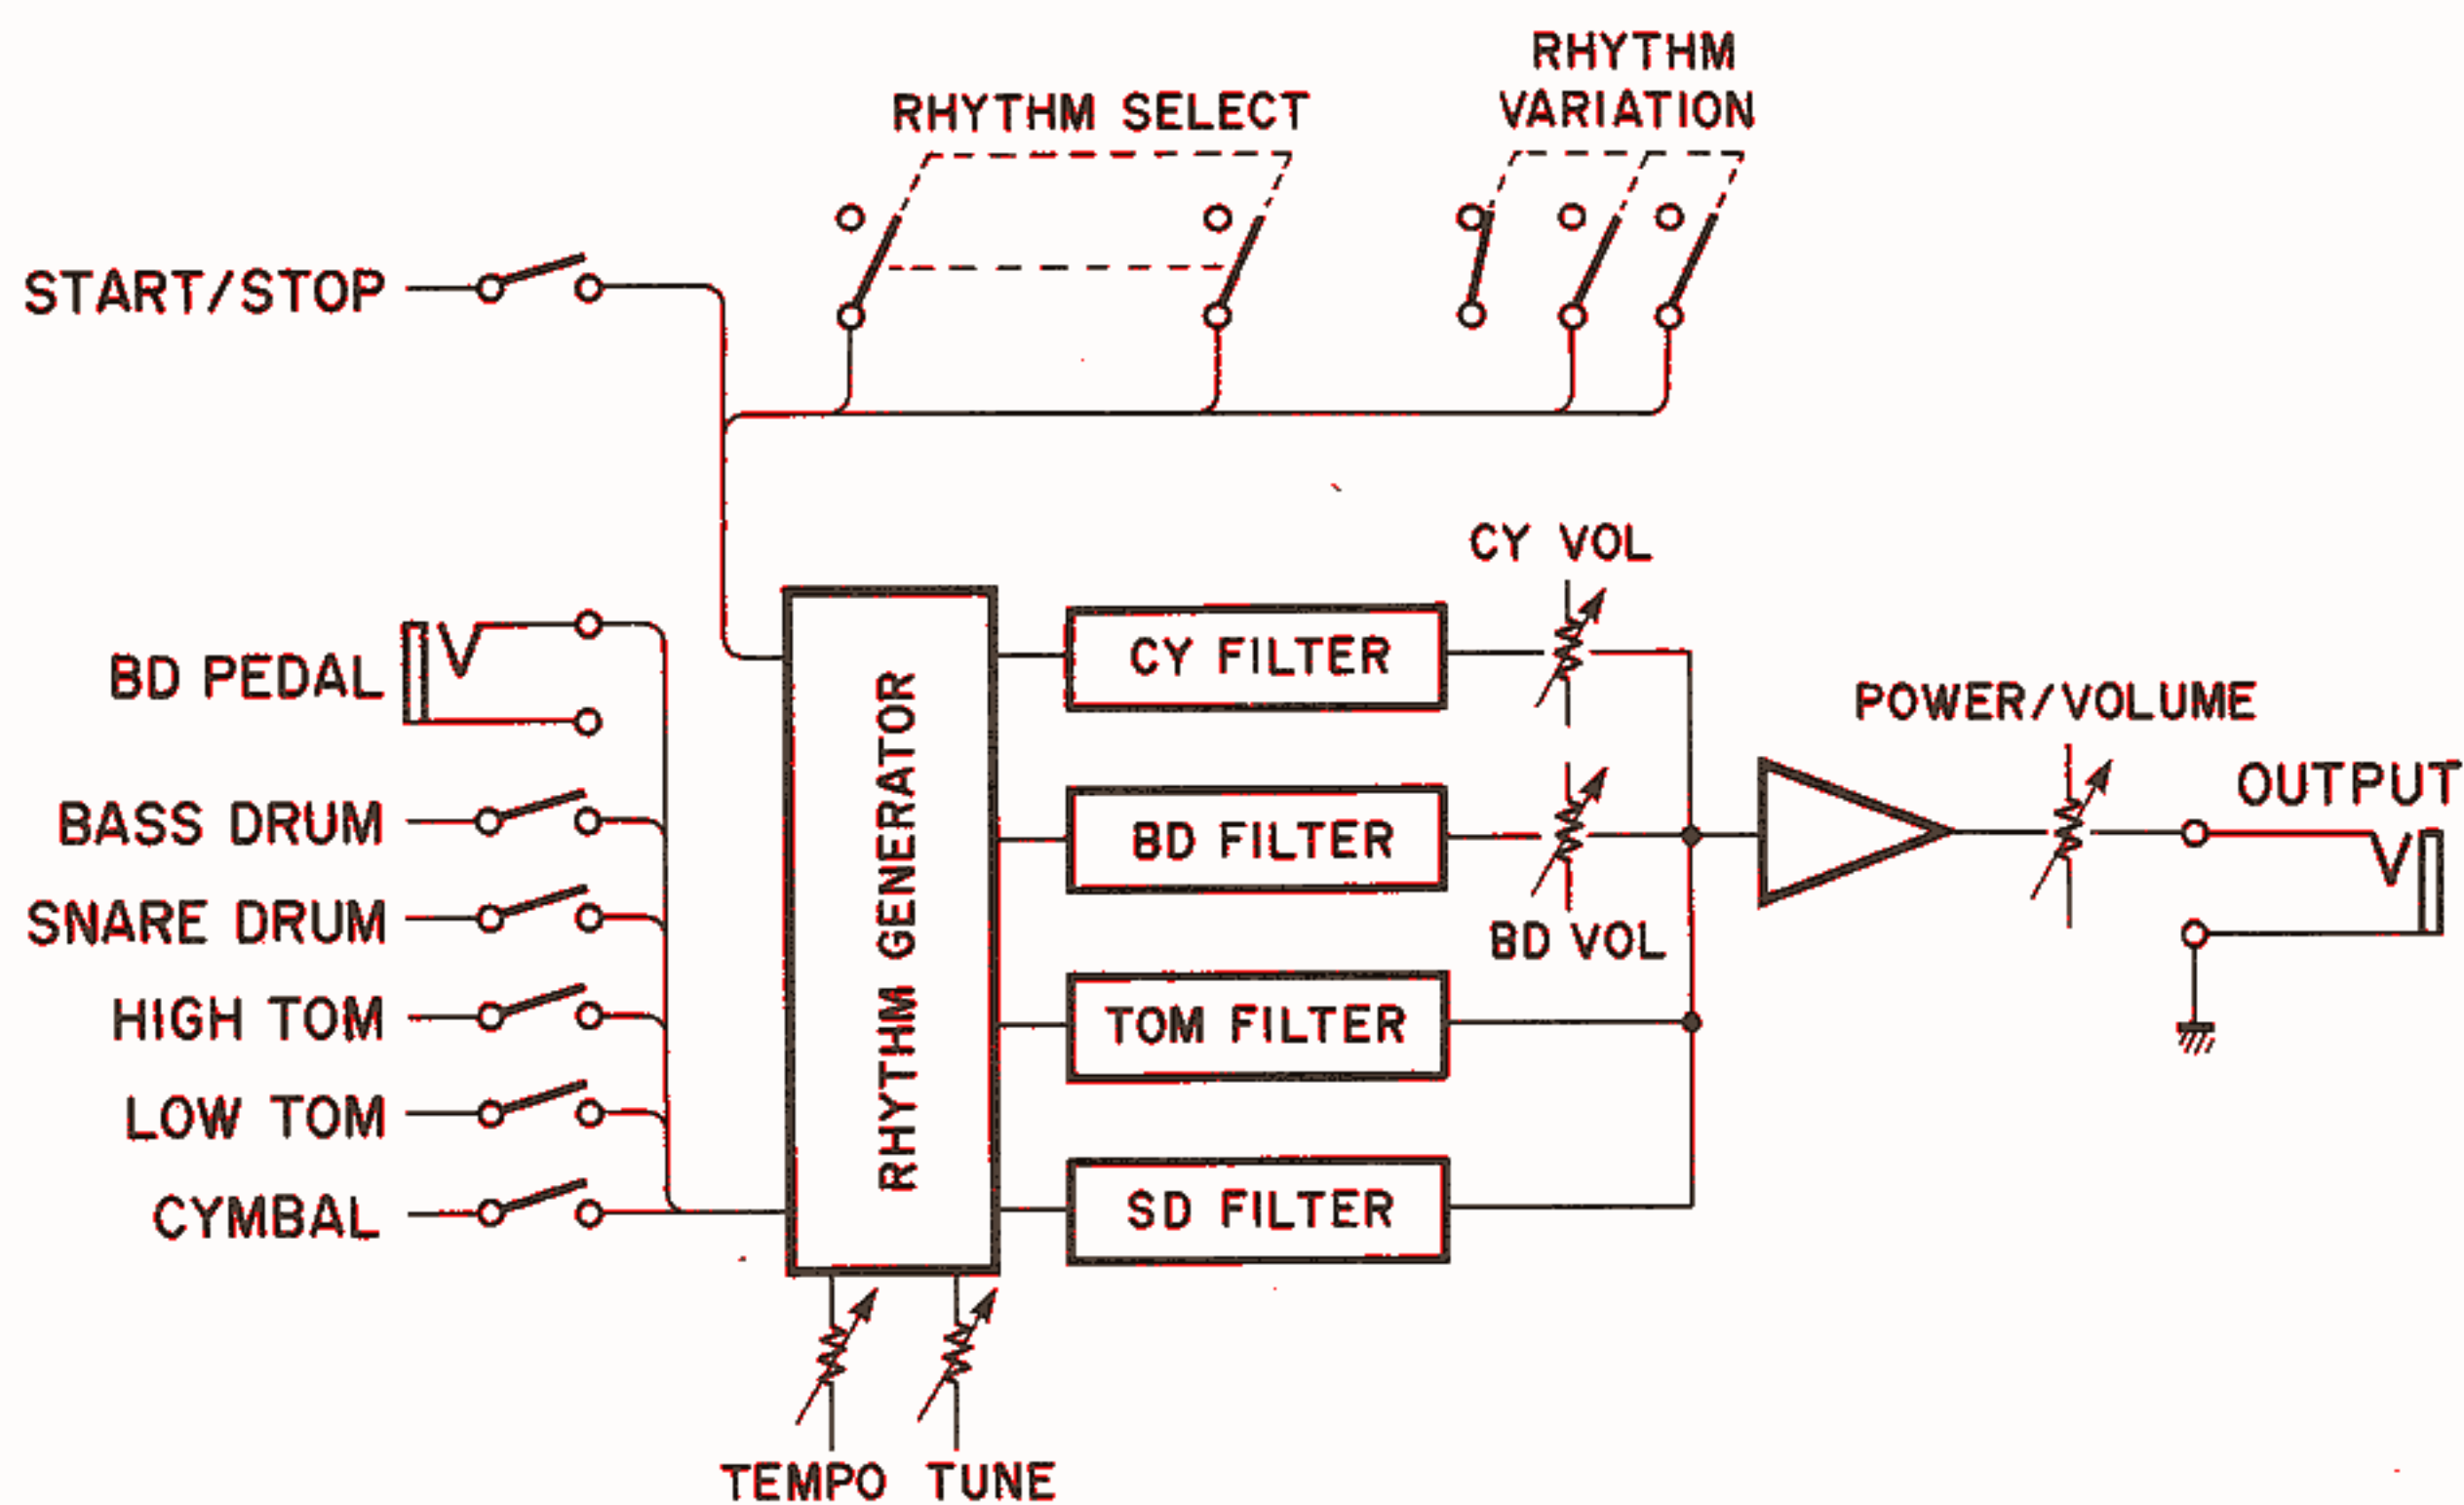

PRINTED CIRCUIT BOARD (Parts side)

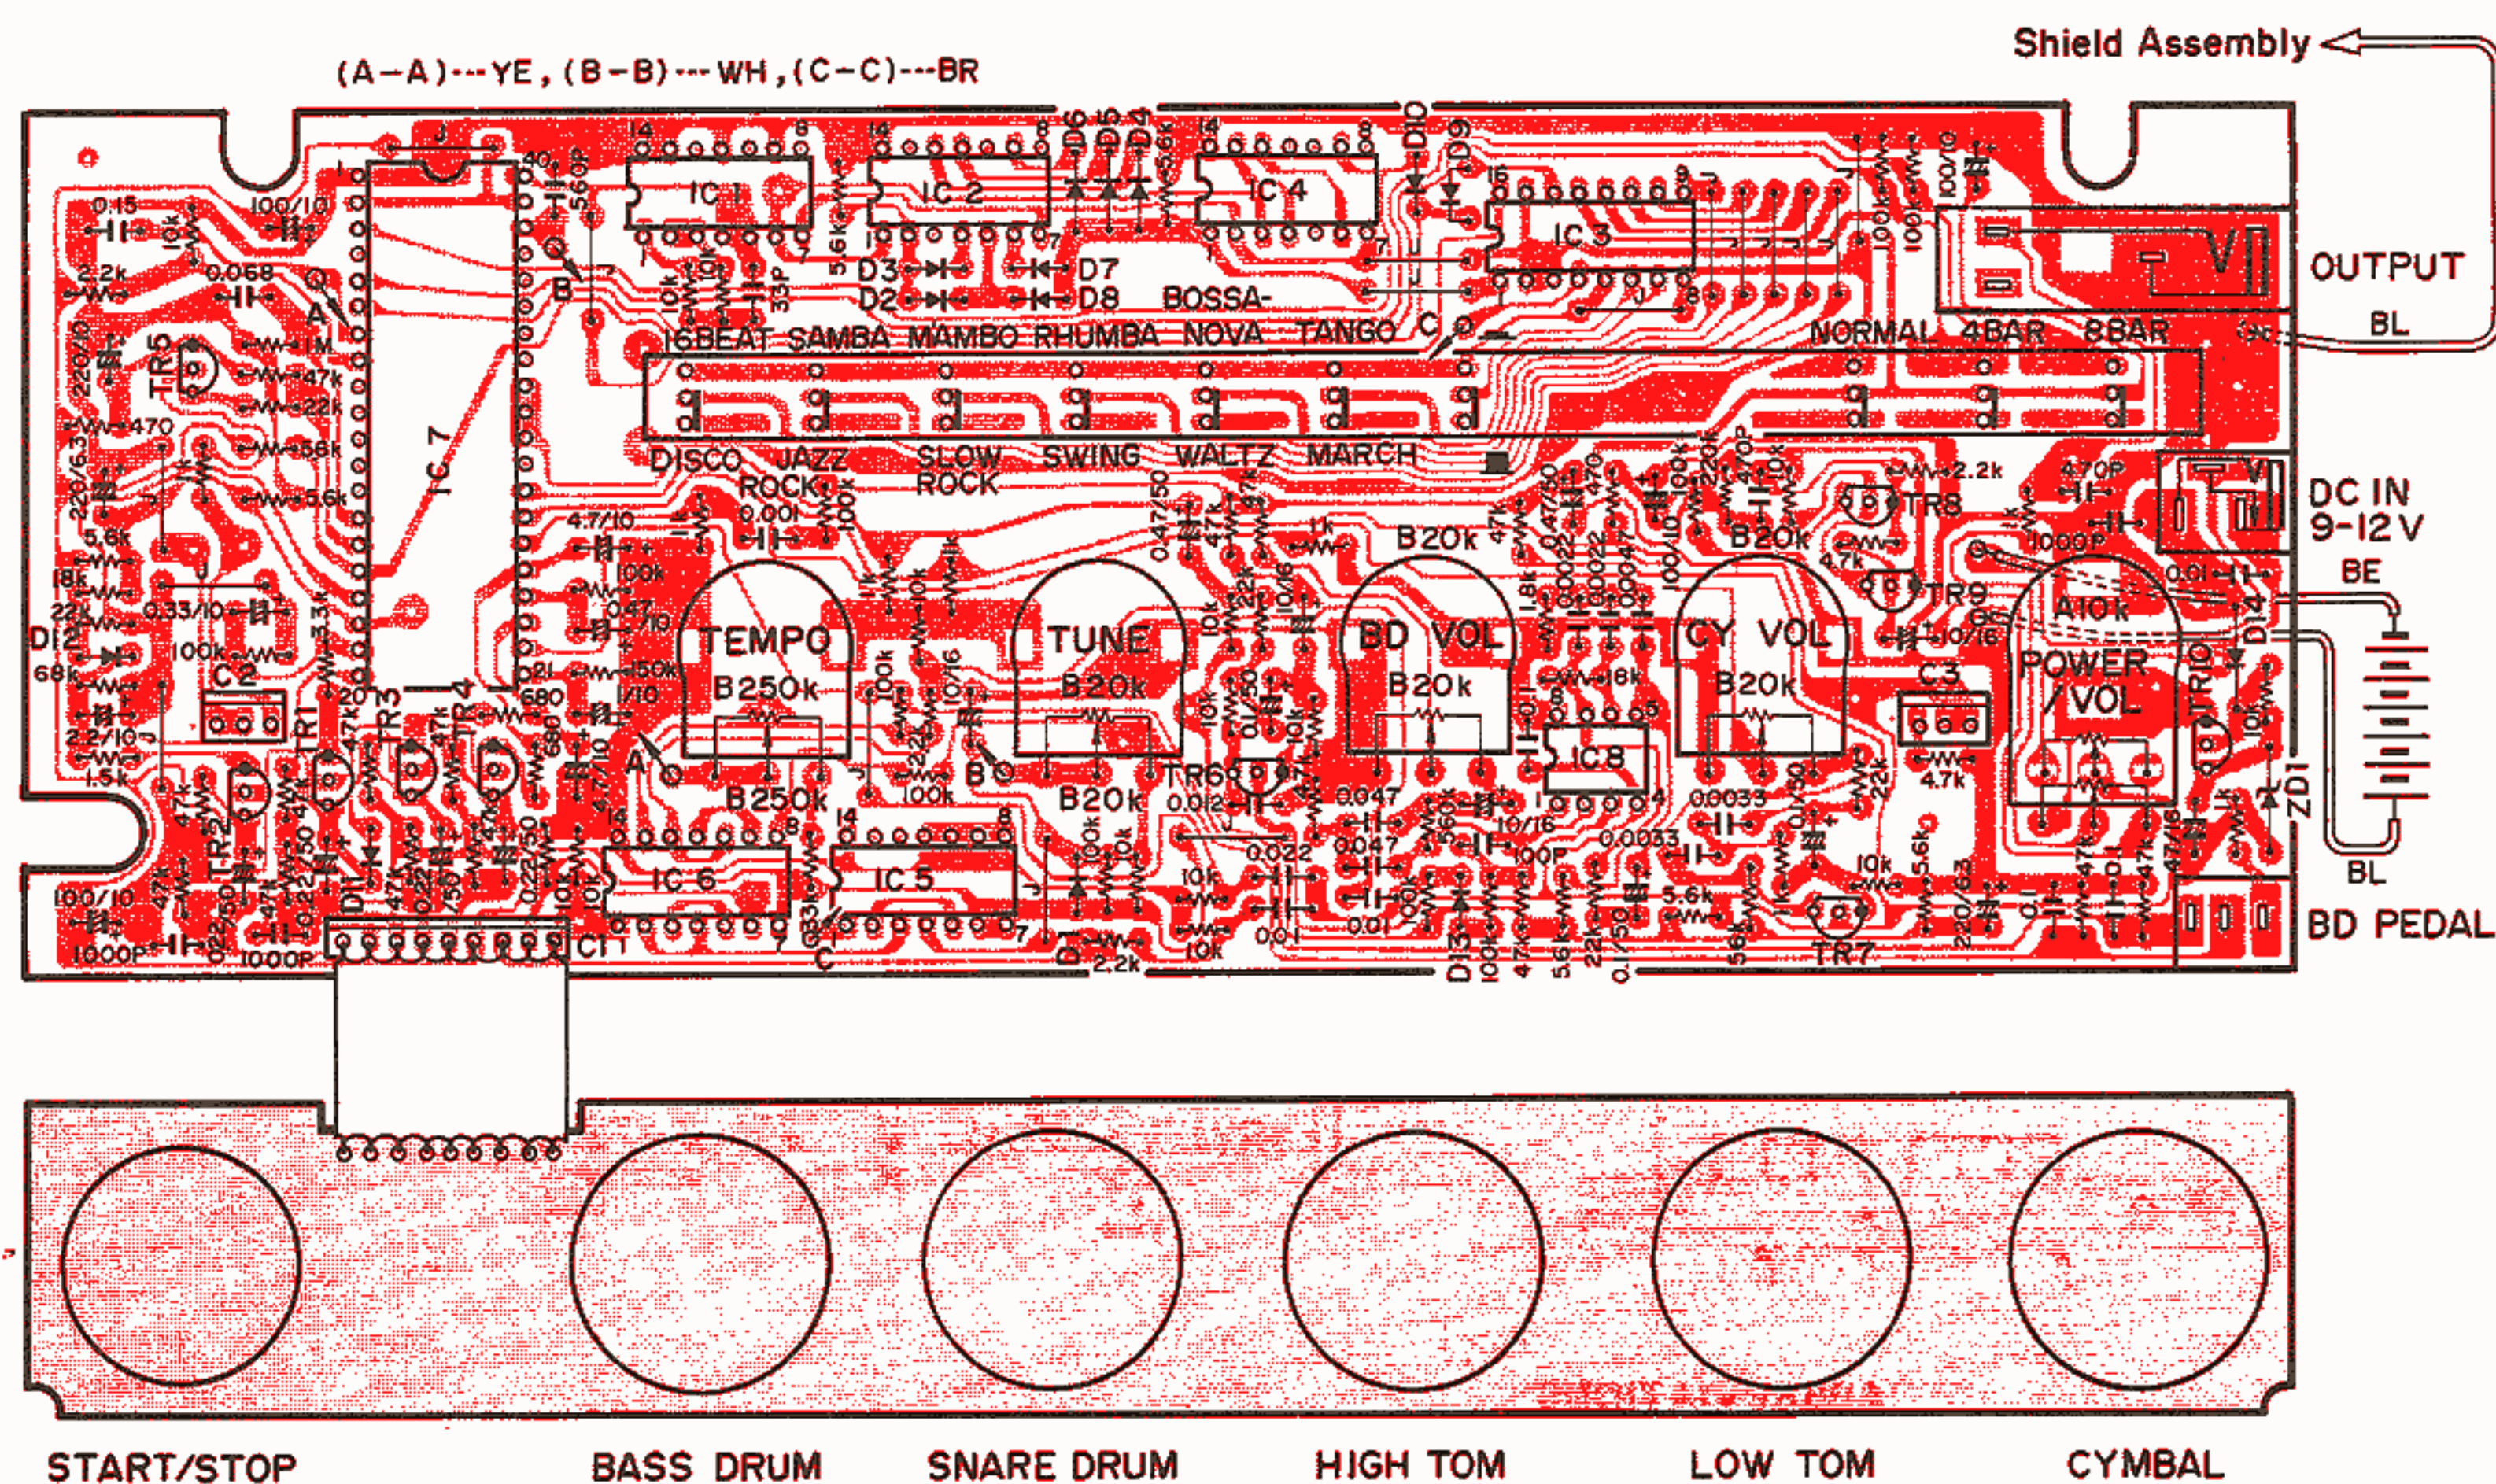

SEMICONDUCTOR LEAD CONFIGURATIONS

